



Instructions for the intra-bottle inkwell

1. When the ink is low, open ink bottle and place ink miser intra-bottle inkwell into the 3 oz. bottle.
2. Replace ink bottle cap and screw on tightly leaving the miser in place.
3. Turn bottle upside down a few times allowing the ink to fill the miser.
4. Quickly turn upright and carefully remove lid.
5. Place pen nib in the ink filled ink miser and fill the pen with ink as usual.
6. Leaving your ink miser in place you can replace the cap and secure tightly. Remember to always store your ink bottle up-right.
7. Wipe pen with dry cloth to remove excess ink.
Go to <http://luxurybrandsusa.com/> and click ink miser tab or go to the Luxury Brands of America YouTube page.

ENJOY AND NEVER WASTE A DROP!



Instructions for the **ink-shot**

1. Place ink-shot inkwell on a protected surface.
2. Open ink bottle. Using the dropper, fill the ink-shot with ink.
3. Place the nib of the pen in the ink-shot and fill pen as usual.
4. After filling, wipe the pen with soft cloth or paper towel to remove excess ink.
5. Pour any remaining ink back into the ink bottle and secure bottle cap.
6. Rinse and dry until next use.

Go to <http://luxurybrandsusa.com/> and click ink miser tab or go to the Luxury Brands of America YouTube page

ENJOY AND NEVER WASTE A DROP!

